

**\*\*\*IMPORTANT WARNINGS READ BEFORE INSTALLATION OR USE\*\*\***

**YOUR HANDHELD PHONE OR ELECTRONIC DEVICE IS NOT WATER OR STEAM PROOF!**  
**YOU MUST NOT TAKE THE DEVICE IN THE SHOWER, STEAMROOM OR GET WET UNLESS YOU PURCHASE WATERPROOF COVER/CASE FOR IT. THESE ARE REDILY AVAILABE AT MOST RETAIL STORES OR ONLINE. OTHERWISE, YOU WILL DAMAGE IT!!!!**

- YOUR SHOWER MAY BE A SLIP AND FALL HAZARD CHECK WITH YOUR CONTRACTOR OR TILE MANUFACTURER REGARDING THE SAFE USE OF YOUR FLOORING IN A STEAM APPLICATION. SLIPPING AND FALLING INTO THE STEAM HEAD ITSELF OR INTO THE STREAM OF STEAM EMITTING FROM THE STEAM HEAD WILL CAUSE SERIOUS BURNS, OR PHYSICAL INJURY.
- DO NOT USE A STEAM ROOM WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS, AS THIS CAN BE HAZARDOUS TO YOUR HEALTH.
- IF YOU ARE FEELING UNCOMFORTABLE, DIZZY, FAINT, OR STARTING TO FALL ASLEEP, IMMEDIATELY EXIT THE STEAM ROOM.
- FOR SAFETY, SMOOTH OPERATION PRACTICE AND LIABILITY. IF YOU ARE A PLUMBER/INSTALLER, PLEASE ENSURE THIS OWNERS MANUAL & WARRANTY INFORMATION IS IN THE OWNER'S POSSESSION WITH SPECIFIC DELEGATION FOR THE PURPOSE OF COMPLETELY FAMILIARIZING ANY USERS WITH THIS PRODUCT.
- FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS SPECIFICALLY WILL CAUSE THE WARRANTY TO BE VOID.
- **THERMASOL IS NOT RESPONSIBLE FOR DAMAGE TO ANY SECONDARY DEVICE USED WITH THIS SYSTEM. THINK BEFORE USING!**

TECHNICAL AND WARRANTY SUPPORT ONLY: 1-800-776-0711  
(Monday – Thursday, 7:00 a.m. to 5:00 p.m. PST; Friday, 8:00 a.m. – 12:00 p.m. PST)  
FOR ALL OTHER CUSTOMER SUPPORT PLEASE CONTACT YOUR DEALER

**TABLE OF CONTENTS**


Table of Contents	SECTIONS	1	2	3	4	5	6
1 Introduction .....	1	4 Troubleshooting .....	7				
2 Setting Up Your Bluetooth Music Receiver .....	2	5 Safety Warnings .....	8				
3 Pairing Your Bluetooth Music Receiver 3	3	6 Information .....	9				
Reconnecting Your Device.....	5	FCC Statement .....	9				
Changing Connected Device.....	6	Warranty .....	10				
Out of Range or Lost Signal.....	6						

**INTRODUCTION**

Table of Contents	SECTIONS	1	2	3	4	5	6
Features							
What's in the Box							


**Features**

- Play your iPad, iPhone, iPod touch, or other device enabled with Bluetooth technology wirelessly through your home stereo
- Control your music directly from your iPad, iPhone, or iPod touch
- Connect a device without ever going near the stereo
- Bluetooth connection has a 30 ft. range for virtually unlimited wireless listening in your home

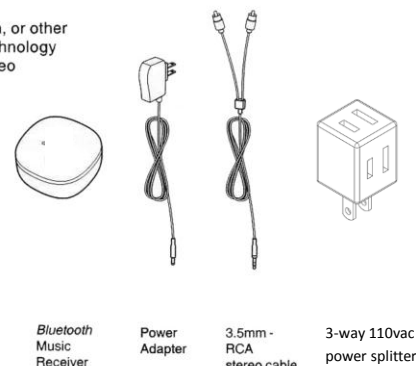

**SETTING UP YOUR BLUETOOTH MUSIC RECEIVER**

Table of Contents	SECTIONS	1	2	3	4	5	6
1. Connect one 3.5mm end of the included audio cable to the headphone jack of the Bluetooth Music Receiver.							
2. Connect the other end (3.5mm or 2xRCA) to an audio input on your ThermoSol Light and sound system							
3. Connect the AC power adapter cable to the Bluetooth Music Receiver's DC input jack, and plug the AC adapter into a wall power outlet.							
4. The blue LED light will flash once to indicate the unit is powered and is now ready to be paired to your iPad, iPhone, or iPod touch.							

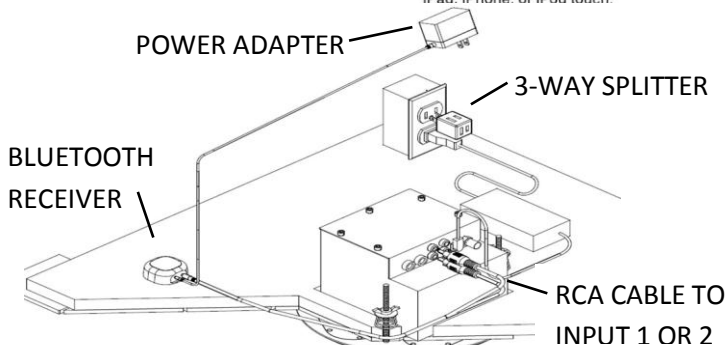

**PAIRING YOUR BLUETOOTH MUSIC RECEIVER**

Table of Contents	SECTIONS	1	2	3	4	5	6
1. Go to the Bluetooth Manager of your iPad, iPhone, or iPod touch by following these steps:							
a. From your iPad/iPhone/iPod touch home page, tap "Settings".							
b. Inside Settings, tap on "General".							
c. Inside General, tap on "Bluetooth".							



## PAIRING YOUR BLUETOOTH MUSIC RECEIVER

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---



2. Search *Bluetooth* devices and tap on "Belkin YXX" (e.g., Belkin A58) where:

- Y = a letter (A, B, C, etc.)
- X = a number (00, 01, 02, etc.)

This is the device ID and is also printed on the bottom of the *Bluetooth* Music Receiver for easy reference.



3. Enter "0000" when the player asks for the PIN code. This will allow the iPad/iPhone/iPod touch to pair with the *Bluetooth* Music Receiver.

4. Once paired, the blue LED light on the *Bluetooth* Music Receiver will flash once. The blue LED light will stay on when a connection is established.

Some devices, such as the iPhone, will connect immediately after pairing so the LED will stay on. Other devices, such as laptops, may ask you if you wish to connect and the LED will go off after pairing until a connection is established.

## PAIRING YOUR BLUETOOTH MUSIC RECEIVER

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---

Although the *Bluetooth* Music Receiver can only play music from one device at a time, it is capable of being paired to up to eight devices. This means that you only have to enter the PIN code one time for each device.

Your *Bluetooth* Music Receiver is now connected and ready to play music! Just play music on your device as you normally would and the sound will come out of your stereo speakers!

Keep in mind that the *Bluetooth* Music Receiver has a 30-foot range.

### Reconnecting Your Device

If you move out of range or turn off the *Bluetooth* feature on your iPad, iPhone, or iPod touch, the *Bluetooth* Music Receiver will disconnect from your device. To reconnect, simply access the *Bluetooth* Manager on your device and select the appropriate Belkin YXX device listed. You will not be asked to enter the PIN code again.

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---

### Changing Connected Device

If you want to switch from one device to another, follow these steps:

- End the existing *Bluetooth* connection with the connected device. Access the *Bluetooth* Manager and disable the *Bluetooth* function of the iPad, iPhone, or iPod touch.
- The *Bluetooth* Music Receiver can now be connected to a different iPad, iPhone, or iPod touch.
- Follow the directions in "Pairing Your *Bluetooth* Music Receiver" to connect a different device.

### Out of Range or Lost Signal

If the music device is out of range (beyond 30 feet) of the *Bluetooth* Music Receiver or if there is something blocking the *Bluetooth* signal, the LED light will turn off to indicate that the *Bluetooth* connection with the music device has been lost. To avoid a lost connection:

- Move the music device back into range (within 30 feet), and/or make sure there's a clear line of sight and that there are no obstructions between the Receiver and the iPad, iPhone, or iPod touch.
- Within 15 seconds, the connection will automatically be reestablished and the blue LED light will turn on.
- If the connection is lost for more than 15 seconds, the connection will need to be reestablished. Follow the directions in "Reconnecting Your Device".

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---

You can quickly solve most problems with your *Bluetooth* Music Receiver by following the advice in this section.

### My music is not coming out of the stereo speakers.

#### Solutions:

- Make sure the *Bluetooth* Music Receiver is powered.
- Make sure an audio cable is correctly and firmly connected to the *Bluetooth* Music Receiver.
- Make sure one of the two supplied audio cables is correctly and firmly connected to the Receiver and the stereo.

- Make sure the Receiver is powered.
- Make sure the stereo volume is set to a comfortable listening level.
- Make sure you are within range of the Receiver, and that your iPad, iPhone, or iPod touch is connected via *Bluetooth* technology with the Receiver.

## SAFETY WARNINGS

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---

Your *Bluetooth* Music Receiver requires full concentration and both hands to install.

Do not use this apparatus near water (for example, a bath tub, wash bowl, kitchen sink, laundry tub, wet basement, swimming pool, or other areas located near water).

Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning.

Do not install near any heat sources such as stoves or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles, and the point where they exit the apparatus.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus when unused for long periods of time.

THERMASOL does not assume any responsibility for personal injury or property damage incurred due to interaction with the *Bluetooth* Music Receiver, iPad, iPhone, or iPod.

## INFORMATION

Table of Contents	SECTIONS	1	2	3	4	5	6
-------------------	----------	---	---	---	---	---	---

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.