


Maintaining your Steam Generator

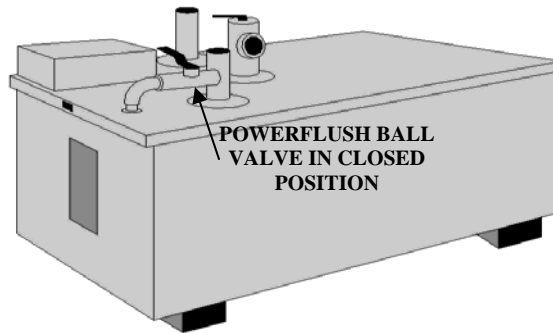

Manual Powerflush

1. Power on the control and set the timer to 45 minutes.
2. Open the powerflush ball valve located on top of the generator for 5-7 minutes.
3. After 5-7 minutes close the powerflush ball valve.
4. Allow generator to finish the 45-minute session.

**** ThermaSol recommends one powerflush cycle after every fifty uses or at least twice a year. ****

Warning: IT IS IMPORTANT THAT NO ONE BE INSIDE THE SHOWER ENCLOSURE DURING THE POWERFLUSH CLEANING CYCLE. IT IS ALSO IMPORTANT THAT THE ENCLOSURE DOOR BE CLOSED DURING THIS CYCLE.

CONSUMER WARNING

WARNING

Do not use this product unless you have consulted with your doctor and received written permission to do so. Use of this product may be hazardous to your health.

WARNING

Never attempt to fill aroma reservoir on the steamhead when the unit is in the on position. Severe burns will occur.

WARNING

Do not use ThermaSol Aroma Therapy Oils or skin care products or any product in conjunction with your steambath without consulting with your allergist or doctor before use. These products may be hazardous to your health.

WARNING

Your shower may be a slip and fall hazard. Check with your contractor or flooring manufacturer regarding the safe use of your flooring in a steam application. Slipping and falling into the steamhead itself or into the stream of steam emitting from the steamhead will cause serious burns, or physical injury.

WARNING

Steam is HOT! Do not touch or go near the steamhead from the time the unit is "ON" up to one hour after it has been shut off. Severe burn will occur if you come in contact with the steamhead or steam emitting from the steamhead.

WARNING

Do not use steam room while under the influence of Alcohol or Drugs, as this can be hazardous to your health.

WARNING

If you are feeling uncomfortable, dizzy, faint, or starting to fall asleep immediately exit the steam room.

WARNING

Do not use the steam room if you are under the age of 16 unless supervised by an adult.